


Electrical and Communication Connections:

The DSE0450-DTCxE needs to be powered with 5V DC, through the rear mounted RJ45 connection. This connection also provides RS232 communications which is specific to the model of scanner being used. Please follow the below diagram:

DSE0450-DTCxE Cable connection

PIN	Connection
1	RTS
2	HW_TRIGGER
3	GND
4	RXD
5	TXD
6	+5VDC
7	POWER_ON
8	CTS

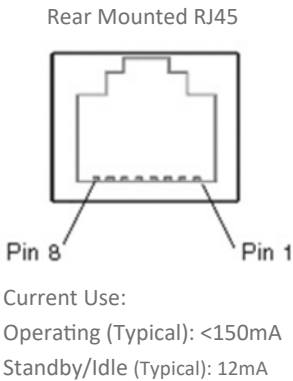

An accessory power and communications cable [PN# CAB-DSE-001](#) can be purchased from Diamond Technologies. www.diamonddt.com

Description:

POWER_ON signal can be used by host to switch-on/off the whole Scan Engine: leave it unconnected if not used

HW_TRIGGER signal can be used to physically issue a “trigger pressure” event to the Scan Engine: leave it unconnected if not used

Models:

DSE0450-DTC0E	DSE0450 RS232 Embedded scanner with enclosure
DSE0450-DTCSE	DSE0450 RS232 Embedded scanner with enclosure and close range sensor

Illumination and Scanning:

The integrated Illumination System is comprised of two white LEDs and non-imaging optics designed to provide first-class reading performances, even in total darkness.


Regulatory

EN/IEC 62471 (exempt)

Aiming System

The aiming system is based on a 650nm laser diode and related optics. It projects a highly visible 4-Dot aimer with center-cross for targeted scanning. The central cross represents the center of the field of view, while the four dots show the boundaries of the field of view.

Below is the scanners scanning aimer at 200mm:

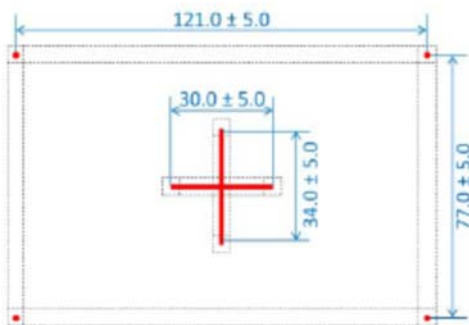

Regulatory

EN/IEC 60825-1:2007 (class 2)
21 CFR 1040 (CDRH) (class II)

WARNING

Viewing the laser output with certain optical instruments (for example, eye loupes, magnifiers, and microscopes) within a distance of 100mm may pose an eye hazard.

STANDARD LASER SAFETY REGULATIONS

This product conforms to the applicable requirements of both CDRH 21 CFR 1040 and EN 60825-1 at the date of manufacture. For installation, use and maintenance, it is not necessary to open the device.

Programming

While no programming is needed to utilize the DSE0450-DTCxE your particular application may require changes to the scanners default operation.

The DSE0450-DTCxE supports several standard operating modes. These include:

Stand Mode: (DEFAULT) No trigger pull is required to read a barcode. Scanning is turned on automatically when an item is placed in the reader’s field of view. If the trigger is pulled, the reader acts as if it in single read mode. Double Read Timeout prevents undesired multiple reads while in this mode.

Trigger Single: When the trigger is pulled, scanning is activated until one of the following occurs:

- Scanning Active Time has elapsed
- a label has been read
- the trigger is released

Trigger Hold Multiple: When the trigger is pulled, scanning starts and the product scans until the trigger is released or Scanning Active Time has elapsed. Reading a label does not disable scanning. Double Read Timeout prevents undesired multiple reads of the same label while in this mode.

Trigger Pulse Multiple: When the trigger is pulled, continuous scanning is activated until Scanning Active Time has elapsed or the trigger has been released and pulled again. Double Read Timeout prevents undesired multiple reads of the same label while in this mode.

Flashing: The reader flashes on and off regardless of the trigger status. Flash rate is controlled by Flash On Time and Flash Off Time. When Flash is ON the imager reads continuously; when Flash is OFF scanning is deactivated.

Always On: No trigger pull is required to read a barcode. Scanning is continually on. If the trigger is pulled, the reader acts as if it is in Trigger Single Mode. Double Read Timeout prevents undesired multiple reads of the same label while in this mode.

The default operating mode for the DSE0450-DTCxE is Stand mode and the interface is RS232. The scanners operating mode and other parameters can be programmed using either programming barcodes, using the Datalogic Aladdin software utility found at www.diamonddt.com, or using Service Port Programming. The Service Port Programming commands allow for programmatic changes to the scanners operations. For a list of the available Service Port Programming commands for the DSE0450-DTCxE see the “DSE SW Programming Manual” which is available at www.diamonddt.com.

Operating Mode Programming Barcodes

The following barcodes can be used to change the operating mode:

Prior to scanning the specific operating mode code you must scan the enter/exit programming command. After scanning the operating mode code re-scan the enter/exit programming command.



Scan Mode = Trigger Single



Enter/Exit Programming



Scan Mode = Trigger Hold Multiple



Scan Mode = Trigger Pulse Multiple



Scan Mode = Flashing



Scan Mode = Always On



Scan Mode = Stand Mode

There are also several Host Commands which can be sent directly to the DSE0450-DTCxE reader from a terminal emulation program or from the Datalogic Aladdin utility. These commands are accepted directly from the reader and do not require scanning an enter programming code and do not require placing the DSE in program mode. Examples of these commands include:

E = Enable Scanner

D = Disable Scanner

X = Software trigger Press, simulates trigger press

T = Software trigger Release, simulates trigger release

READING PERFORMANCE

IMAGER SENSOR	WVGA: 752 x 480 pixels
LIGHT SOURCE	Aiming: 650 nm VLD Illumination: Internal White LEDs
PRINT CONTRAST RATIO (MIN)	25%
FIELD OF VIEW	40° H x 26° V
READING ANGLE	Pitch: +/- 60°; Roll (Tilt): +/-180°;Skew (Yaw): +/- 60°
READING INDICATORS (optional),	Green Spot good read confirmation
	Audible Beeper
RESOLUTION (MAXIMUM)	1D Linear: 3 mils; DataMatrix: 7.5 mils; PDF417: 5 mils

DSE0450 Ultra Compact 2D Embedded

Barcode Scan module

Quick Reference Guide



Model: DSE0450-DTCxE

Manual Version 1.01



The Diamond Technologies DSE0450-DTCxE are embedded barcode scan modules designed for integration into OEM equipment such as Lab instrumentation, Medical Devices, Kiosks, Automated machines, and customer facing applications. These ultra compact, reliable, barcode modules are omni directional readers that will read all standard 1D and 2D barcodes with high accuracy regardless of code orientation. Based on the model being used the reader includes integrated user feedback in the form of patented Good Read Green spot and loud audible beep.

The reader includes patented, highly accurate, decode software libraries. The reader provides decoded output through its' RS232 interface. The readers hardware and software has been designed for the user to easily integrate the module into a host system. This guide provides the basic instructions for that integration.

Physical Mounting:

The DSE0450-DTCxE provides (3) M2X.04 Thread 3X mounting holes in the rear of the enclosure.

