

LASER SENTINEL™



Safety laser scanner based on Time Of Flight measurement
 More than 72 m² safely monitored, with 5.5 m over 275°
 High detection performances in compact size
 Advanced dust filtering
 Easy programming with intuitive Graphic User Interface

- Dimensions (w,d,h): 102 , 112.5, 152 mm
- I/O connection with standard 8 pins female M12 cable
- 2 Warning zones up to 40 m
- 40 / 70 mm detection capability
- Up to 10 zone sets
- Metal brackets allowing full orientation
- Auto/Manual restart
- Total muting function
- Colour graphic display for monitoring and diagnostics



APPLICATIONS

- Robot cells (pick and place, inspection, testing, welding, etc)
- Palletizers / depalletizers
- Open machinery, process lines
- Automated Guided Vehicles (AGV)
- Automated Guided Carts (AGC)
- Mobile Industrial Robots

INDUSTRIES

- Automotive
- Material handling
- Secondary Packaging
- Food
- Wood
- Ceramics

	FINGER	HAND	ARM	BODY
Type 3			X	X

SLS SA - 5 - 08

MODEL		MAX SAFETY RANGE		I/O CONNECTORS	
B	Basic, 3 zone sets	5	5.5 m (70 mm detection capability)	08	M12 8-pin male
SA	Standalone, 6 zone sets			0812	M12 8-pin male OR M12 12-pin male
M	Master, 10 zone sets				
R	Slave (or Remote)				



TECHNICAL DATA

	SLS-B5	SLS-SA5-08	SLS-M5-0812	SLS-R5	
GENERAL DATA					
Type (EN61496-1)			3		
PL (EN ISO 13849-1)			d		
SIL (IEC 61508)			2		
DETECTION DATA					
Detection capability	70 mm	40 / 70 mm selectable			
Angular resolution	0.1°				
Safety zone operating range	0.05 ... 5.5 m				
Warning zone max operating range	0.05 ... 40 m with remission of target = 90% (white)				
Max. number of symultaneous warning zones	1	2			
Max. opening angle	275°				
Tolerance zone	150 mm	100 mm			
ELECTRICAL DATA					
Power supply (Vdd)	24 Vdc ± 20%				
Output current	0.25 A max / each OSSD			N/A	
Output Capacitive load	2.2 uF @ 24Vdc max			N/A	
Input Load current	6 ... 15 mA			N/A	
Input saturation voltage	> 15 V			N/A	
Input Capacitive Load	22 uF			N/A	
MECHANICAL AND ENVIRONMENTAL DATA					
Operating temperature	0 ...+50 °C				
Storage temperature	-20 ... 70°C				
Humidity	15 ... 95 % (no condensation)				
Mechanical protection	IP 65 (EN 60529)				
INPUTS / OUTPUTS CONFIGURATION					
Connector used	M12 8 pin	M12 8 pin	M12 8 pin	M12 12 pin	N/A
Safety Outputs (OSSDs)	1 x 2	1 x 2	1 x 2	1 x 2	N/A
Standard Inputs	2	0	2	1	N/A
Standard Inputs/Standard Outputs (configurable)	1	3	1	4	N/A
CONFIGURABLE PARAMETERS					
Response time					
for main unit	Min: 62 ms; Max: 482 ms				
for any additional slave unit				10 ms	
Max. Zone sets number in any activation order (*1):					
with 1 safety zone	3	3	3	10	N/A
with 1 safety zone + 1 warning zone	2	2	2	6	
with 1 safety zone + 2 warning zone	N/A	N/A	N/A	3	
Max. Zone sets number in a particular activation order (*2):	N/A	6	N/A	N/A	
Zone set input switching time	Min: 30 ms; Max: 5000 ms				
FUNCTIONS					
Manual / automatic restart	Yes			N/A	
Reset (power cycle)	Yes				
Total Muting (monodirectional or bidirectional)	No	Yes			
Reference Points	No	Yes			
Override	No	Yes (*3)	Yes		N/A
Muting Lamp	No	Yes			N/A
Muting Enable	No	Yes (*3)	Yes		N/A
Clean Window Alarm	No	No	Yes		
Generic Fault Alarm	No	Yes	Yes		
Measurement data	No	Yes (*4)	Yes (*5)		
Measurement data angular resolution	No	0.1°			0.5°
APPLICATIONS					
Horizontal static	Yes				
Vertical static	No	Yes			
Moving (simple AGVs)	No	Yes			
Moving (medium complexity AGVs)	No	No	Yes		
NOTES					
(*1) The max number of zone sets switching is reached when all available inputs are used for zone set switching					
(*2) With 1 safety zone only, up to 3 zone sets are available in any activation order. Up to 6 are available only using some allowed activation order. Refer to Manual and GUI for details					
(*3) Ovrerride Input, Muting Enable input and Muting Lamp output on SLS-SAx are mutually exclusive					
(*4) Using the programming connector on the front of the device					
(*5) Using the rotating connector in the back of the device					

CONNECTIONS

	CHARACTERISTICS	SLS-B5	SLS-Sax	SLS-Mx-0812	SLS-Rx
A	M12 4 pole rotatable side connector	Ethernet port for Programming and Monitoring	Not Present	Ethernet port for Programming and Monitoring	Safe connection to Master or previous Slave
B	M12 8 pole rotatable side connector	Not used	Not Present	Safe Connection to Slave device	Safe Connection to next Slave device
C	M12 12 poles connector on the memory group	Not used	Not Present	Used for power and I/O in alternative to D	Not Present
D	M12 8 poles connector on the memory group	Machine interface: power supply and inputs/outputs	Machine interface: power supply and inputs/outputs	Used for power and I/O in alternative to C	Not Present

SLS-B5 (Base)
SLS-M (Master)
SLS-R (Slave)

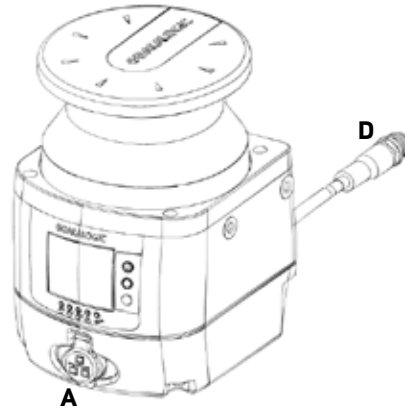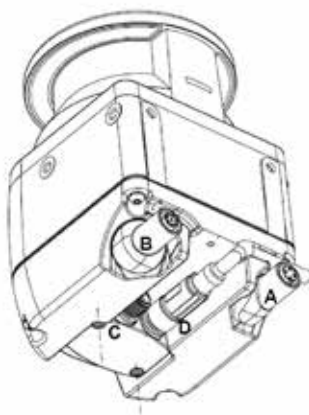

IA (Standalone)

CONNECTOR (M12, 8-POLE)



	SIGNAL	DESCRIPTION	COLOR	PIN NUMBER
POWER	POWER SUPPLY	24Vdc	BROWN	2
	GND_ISO	0 V	BLUE	7
INPUT/OUTPUT	MULTI IN/OUT (*)	Selectable by GUI	GREEN	3
	MULTI IN/OUT (*)	Selectable by GUI	YELLOW	4
	MULTI IN/OUT	Selectable by GUI	WHITE	1
SAFETY OUTPUTS	OSSD11	Safety Output	GRAY	5
	OSSD12	Safety Output	PINK	6
OTHER	F_EARTH	Functional Earth	RED	8

NOTE

(*) Only MULTI IN for SLS-B5 and SLS-N

CONNECTOR (M12, 12-POLE)




	SIGNAL	DESCRIPTION	COLOR	PIN NUMBER
POWER	POWER SUPPLY	24Vdc	BROWN	1
	POWER SUPPLY	24Vdc	GREEN	4
	GND_ISO	0 V	BLUE	2
	GND_ISO	0 V	YELLOW	6
INPUT	MULTI IN	Selectable by GUI	WHITE	3
INPUT/OUTPUT	MULTI IN/OUT	Selectable by GUI	BLACK	7
	MULTI IN/OUT	Selectable by GUI	RED	9
	MULTI IN/OUT	Selectable by GUI	VIOLET	10
	MULTI IN/OUT	Selectable by GUI	GREY/PINK	11
SAFETY OUTPUTS	OSSD11	Safety Output	GRAY	8
	OSSD12	Safety Output	PINK	5
OTHER	F_EARTH	Functional Earth	RED/BLUE	12

CONNECTIONS

SELECTABLE INPUTS AND OUPUTS					
IN /OUT	SIGNAL	SLS-B5	SLS-SA5	SLS-M	NOTES
MULTI IN	Reset	Yes			
	Restart	Yes			
	Reset/Restart	Yes			
	Area Switch 1	Yes			
	Area Switch 2	Yes			
	Area Switch 3	Yes			
	Area Switch 4	No		Yes	
	Area Switch 5	No		Yes	
	Muting Enable	No	Yes		
	Muting 1	No	Yes		In order to activate muting, both muting inputs must be used
	Muting 2	No	Yes		
	Override	No	Yes		Can be used in combination with muting function
MULTI OUT	Warning 1	Yes			
	Warning 2	No	Yes		
	Muting lamp	No	Yes		Can be used in combination with muting function
	Alarm 1	No	Yes		Clean Window Alarm
	Alarm 2	No	Yes		General Fault Alarm


DIMENSIONS

SLS-M5 AND SLS-B5

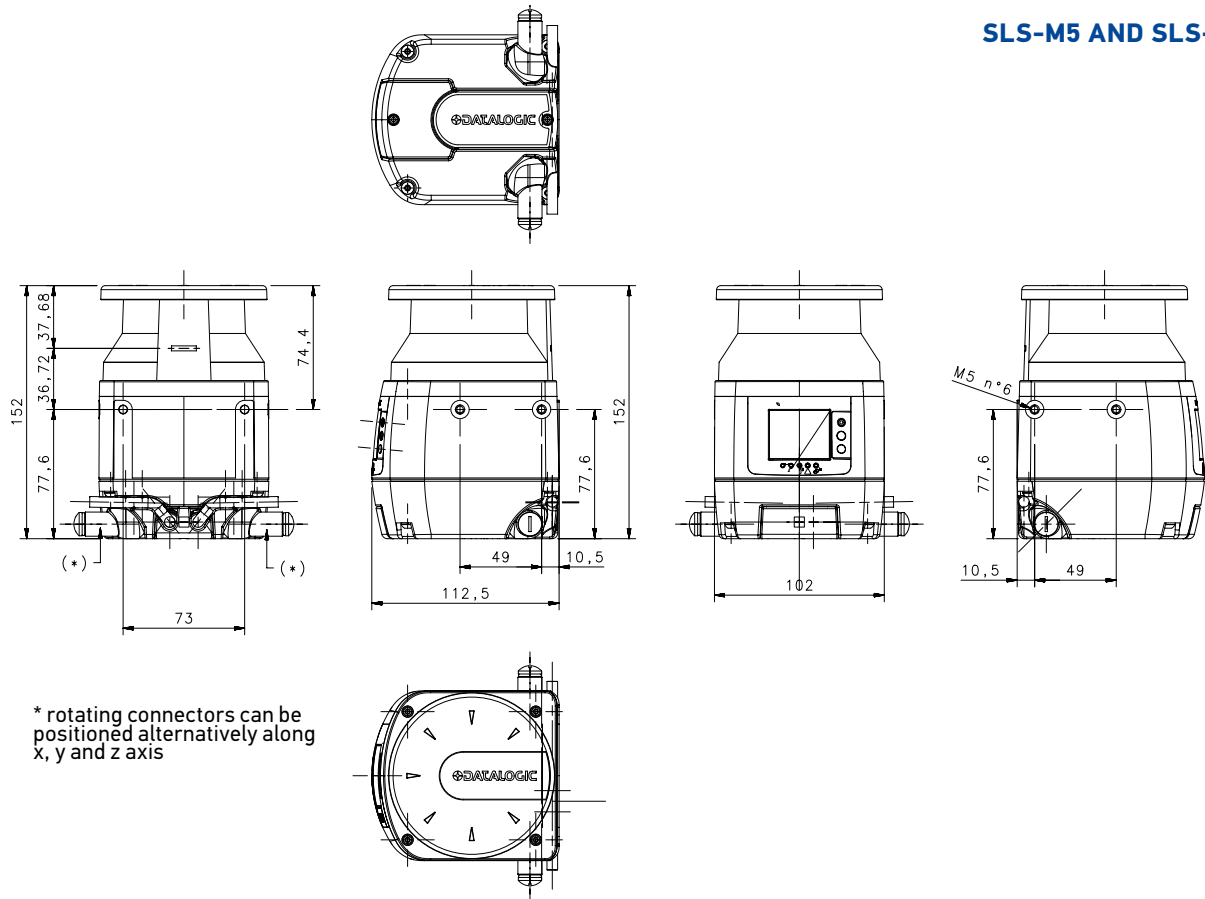


DIMENSIONS

SLS-M5 AND SLS-B5 WITH BRACKETS

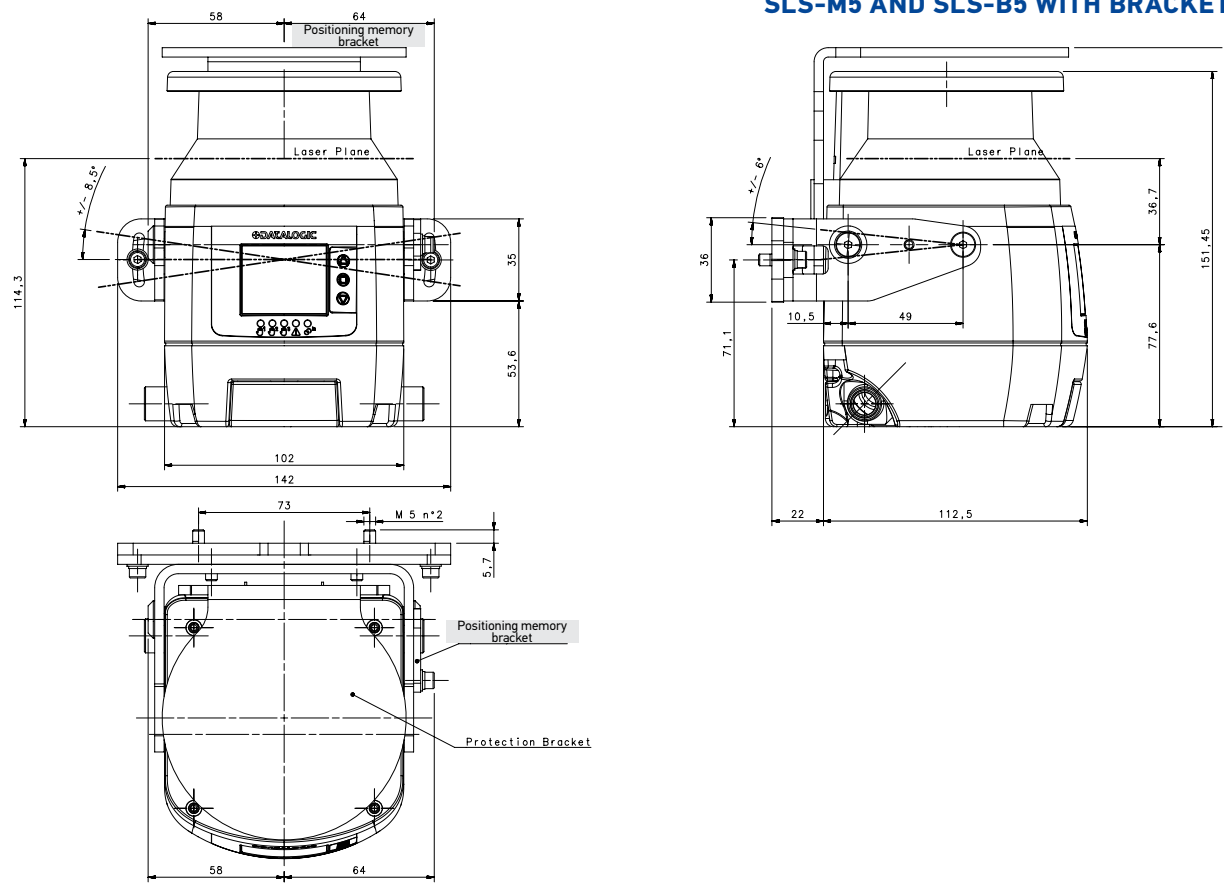


SLS-SAX

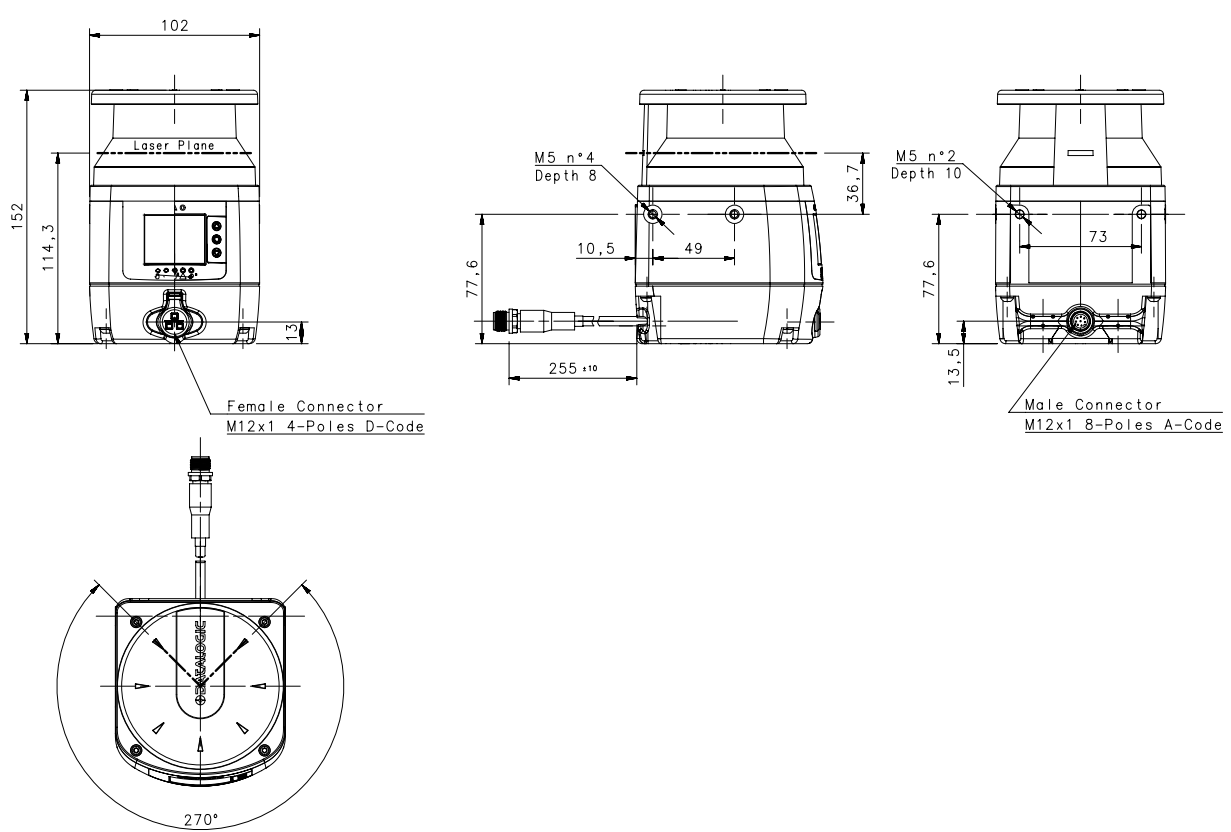


DIMENSIONS

SLS-SAX WITH BRACKETS

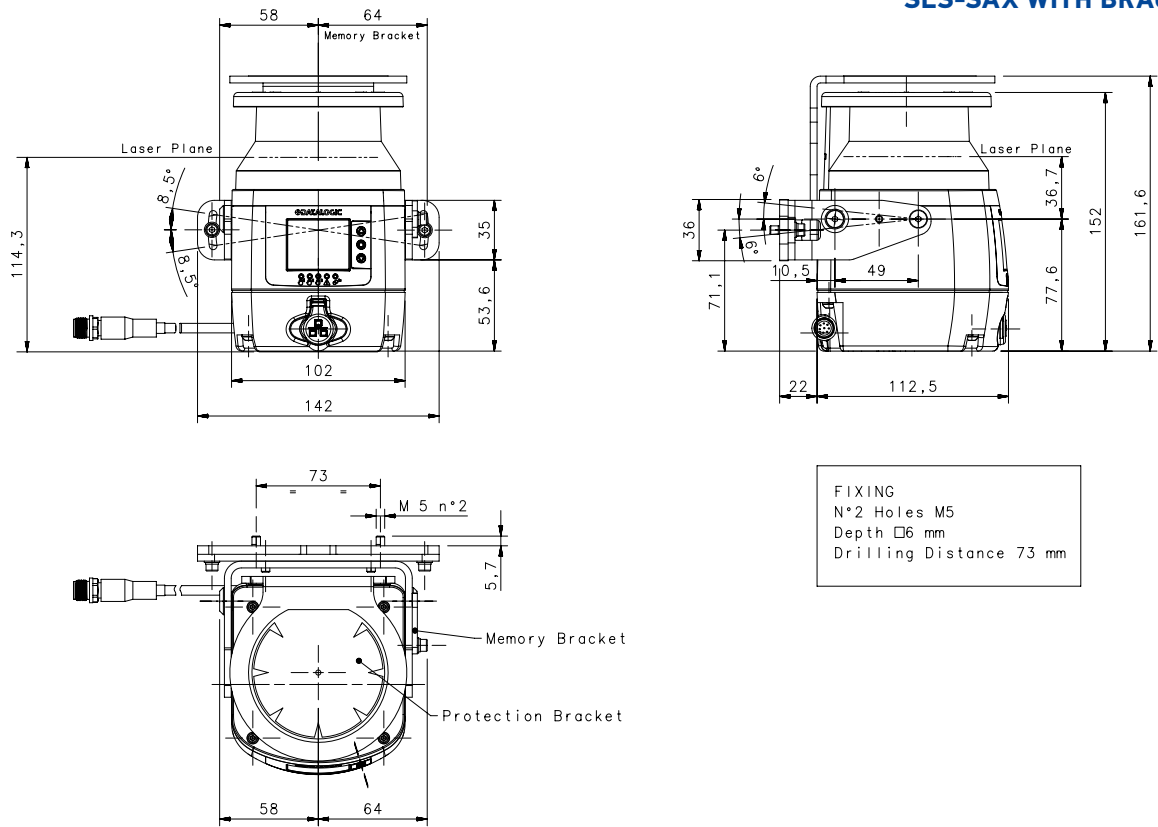

SLS-R5

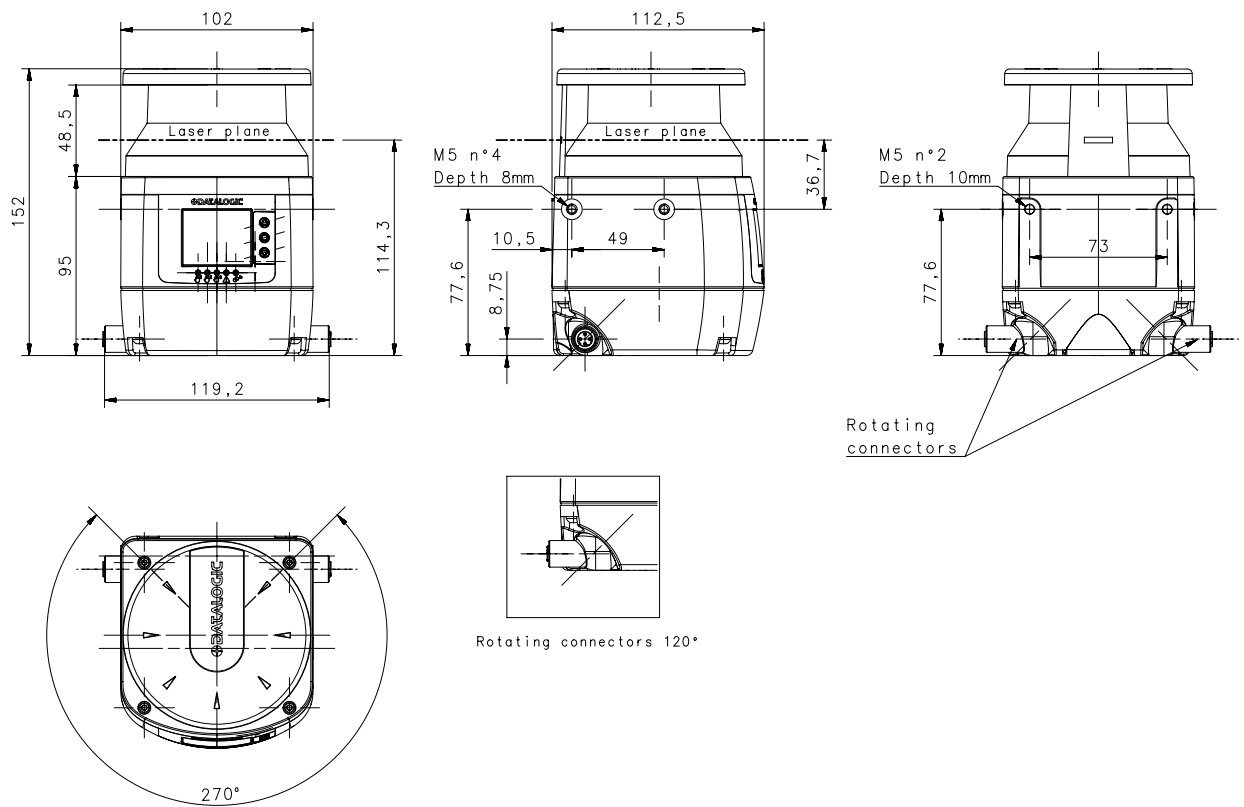

MODEL SELECTION AND ORDER INFORMATION


	MODEL	PRODUCT DESCRIPTION	ORDER NO.
BASE	SLS-B5	Base 5.5m 3 zone sets	958001100
STANDALONE	SLS-SA5-08	Standalone 5.5m 6 zone sets	958001090
MASTER/SLAVE	SLS-M5-08012	Master 5.5m 10 zone sets	958001040
	SLS-R5	Remote 5.5m	958001070

CABLES

	MODEL	POLES	LENGTH	CODE
MAIN CABLES	CS-A1-06-U-03	8	3 m	95ASE1220
	CS-A1-06-U-05		5 m	95ASE1230
	CS-A1-06-U-10		10 m	95ASE1240
	CS-A1-06-U-15		15 m	95ASE1250
	CS-A1-06-U-25		25 m	95ASE1260
	CS-A1-10-U-03	12	3 m	95A252720
	CS-A1-10-U-05		5 m	95A252730
	CS-A1-10-U-10		10 m	95A252740
	CS-A1-10-U-15		15 m	95A252750
	CS-A1-10-U-25		25 m	95A252760
ETHERNET TO HOST CABLES	CAB-ETH-M01 M12-IP67 ETHERNET CAB. (1M)	4	1 m	93A051346
	CAB-ETH-M03 M12-IP67 ETHERNET CAB. (3M)		3 m	93A051347
	CAB-ETH-M05 M12-IP67 ETHERNET CAB. (5M)		5 m	93A051348
	CAB-ETH-M10 M12-IP67 ETHERNET CAB. (10M)		10 m	93A051391
CABLES TO REMOTE	SLS-CABLE-R-5	8	5 m	95ASE2890
	SLS-CABLE-R-10		10 m	95ASE2900
	SLS-CABLE-R-20		20 m	95ASE2910

NOTES

ETHERNET TO HOST CABLES are used for programming and monitoring the device with DL Sentinel, and for reading the measurement data.
CABLES TO REMOTE are used to connect the Master models to the Slaves like in the following picture

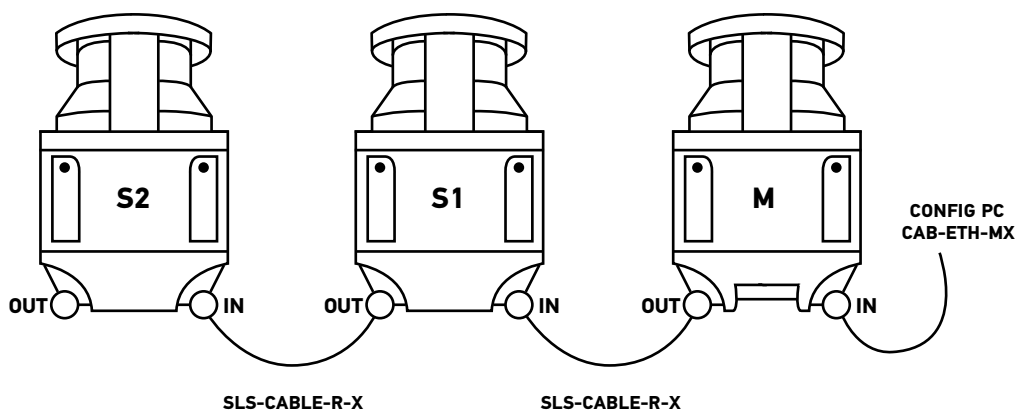

ACCESSORIES

	SLS-B5 / SLS-SA _x	ORDER NUMBER
BRACKETS		
Complete bracket system	SLS-BRACKET-A	95ASE2920
Pitch regulation bracket system	SLS-BRACKET-B	95ASE2930
Head protective bracket	SLS-BRACKET-C	95ASE2940
SAFETY UNITS		
Safety Unit	SE-SR2	95ACC6170
OTHERS		
Liquid cleaner in spray bottle (1 lt)	SLS-CLEANER	95ASE2990
Cleaning cloth (22 cm x 22 cm), 100 pcs.	SLS-CLOTH	95ASE3000

The colour graphical display of LASER SENTINEL shows if any person has been detected in the safety or warning areas, causing by consequence the stopping of the machine or the warning signal to activate.
 The presence of 11 angular sectors allow to show the direction in which the person has been detected, and its colour indicate if it has been inside the safety (red) or the warning zone (yellow).

DISPLAYED ICON	NAME	DESCRIPTION
 GO	ON state	The device is correctly functioning (OSSDs GO Condition). No presence detected in the Safety and Warning Area. (Configuration accepted)
 WARNING	OFF State for intrusion in Safety Area	The device is correctly functioning. The device has detected a presence in the Warning Area (Configuration accepted)
 STOP	Warning for intrusion in Warning Area	The device is correctly functioning (OSSDs STOP Condition). The device has detected a presence in the Safety Zone. (Configuration accepted)
 REFERENCE	OFF State for Reference Points	The device has detected that Reference Points have moved. The Display Sector in the direction of the moved reference point is lit in blue.

LED NUMBER	SYMBOL	DEFINITION	COLOR	MEANING	OUTPUT STATUS
1		Object Detection in Safety Zone (OSSD 11/12).	GREEN	No object detected in Safety Zone	OSSDs OFF
			RED	Object detected in Safety Zone	OSSDs ON
2		Not used			
3		Object Detection in Warning Zone 2.	AMBER	Object detected in Warning Zone 2	Warning 2 Output OFF
			OFF	No object detected in Warning Zone 2	Warning 2 Output ON
4		Object Detection in Warning Zone 1.	AMBER	Object detected in Warning Zone 1	Warning 1 Output OFF
			OFF	No object detected in Warning Zone 1	Warning 1 Output ON
5		Interlock.	AMBER	No Object detected in Safety Zone Device waiting for Manual Restart (LED1 RED)"	OSSDs OFF
			OFF	No Object detected in Safety Zone Device in ON Status (LED 1 GREEN)"	OSSDs ON

Rev. 04, 01/2019

DATALOGIC PRODUCT OFFERING



Sensors



Hand Held
scanners



Mobile Computers



Laser Marking
Systems



Vision
Systems



Stationary
Industrial
Scanners



Safety Light
Curtains



RFID Systems